



LOCATION	R631	R632	R633	R634	R635	R636
SV-H68	X	X	X	0	0	0
SV-H56	0	X	X	X	0	0
VN-H56	X	0	X	0	X	0
VP-H56	0	X	0	0	0	X
VP-H55	X	0	0	0	X	X

OPTION 1 0 : USE
X : NOTUSE

SERIES	SWITCH	SW601	SW602	SW603	SW604
H68 SERIES	DISPLAY	MEM	C. RESET	EDIT	
H56/H55	ON/OFF	SELECT	COLOR	WIPER	
OPTION 1	EDIT	MEM	C. RESET	NORMAL	

NOTE : IS CONNECTED WITH PATTERN IN THE BOARD
VOLTAGE TAKEN IN THE PLAY MODE () IS RECORD MODE.