

## 4-2-2 Main Adjustment Parameter

Table 4-1 Main Adjustment Parameter (Zilog  $\mu$ -com) NON TTX

FUNCTION	OSD ABBREVIATION	RANGE	INITIAL DATA
AUTO GAIN CONTROL	AGC	0 ~ 63 STEP	54
SUB BRIGHT	SBT	0 ~ 63 STEP	9
SUB CONTRAST	SCT	0 ~ 63 STEP	10
SUB COLOR	SCR	0 ~ 27 STEP	5
SUB TINT	STT	0 ~ 27 STEP	3
RED CUTOFF	RC	0 ~ 254 STEP	31
GREEN CUTOFF	GC	0 ~ 254 STEP	31
BLUE CUTOFF	BC	0 ~ 254 STEP	31
PAL VERTICAL SLOPE	PSL	0 ~ 31 STEP	31
PAL VERTICAL SHIFT	PVS	0 ~ 15 STEP	19
PAL VERTICAL AMPLITUDE	PVA	0 ~ 63 STEP	31
PAL HORIZONTAL SHIFT	PHS	0 ~ 15 STEP	48
NTSC VERTICAL SLOPE	NSL	0 ~ 31 STEP	28
NTSC VERTICAL SHIFT	NVS	0 ~ 15 STEP	16
NTSC VERTICAL AMPLITUDE	NVA	0 ~ 63 STEP	26
NTSC HORIZONTAL SHIFT	NHS	0 ~ 15 STEP	54

NOTE : PVS,PVA, PHS, NVS, NVA,NHS parameters must be aligned using both the 50Hz and 60Hz vertical-field rates.