

## 4-2. TEST MODE 2:

Is available by pressing Test button twice, OSD " TT " appears. The functions described below are available by pressing the two numbers. To release the Test mode 2, press 0 twice, or switch the TV into stand-by mode.

00	Switch test mode 2 off
01	Picture maximum
02	Picture minimum
03	Volume 30%
04	Set service menu mode
05	Set production menu mode
06	Volume 80%
07	Set ageing condition
08	Set shipping condition
09	Language reset
10	No function
11	Adjustment without OSD
12	Dummy
13	Display TV configuration
14	Forced AV 6:9 mode
15	Reset LPM from ROM data
16	copy LPM to reset memory
17	Preset label for AV sources
18	RGB priority on/off
19	Clear all preset labels
20	No function
21	Sub contrast
22	Sub colour
23	Sub brightness
24	Set destination = U
25	Set destination = D
26	Set destination = B
27	Set destination = K
28	Set destination = L
29	Set destination = E
30	No function
31	Set destination =A
32	Dummy
33	Auto AGC
34	Dummy
35	Manual AGC adjust

36-40	Dummy
41	Re-initialise NVM
42	Production use only
43	Initialise geometry settings
44	Initialise all favourite pages = 100
45	Channel locks = off
46	Dealer commander mode
47	Default MSP settings
48	Restore NVM test byte
49	Delete NVM test byte
50-60	No function
61	Turn on Dolby Pro Logic mode
62	White noise to left speaker
63	White noise to right speaker
64	White noise to centre speaker
65	White noise to rear speaker
66	Set standard stereo mode
67	Set Pro Logic normal mode
68	Set Pro Logic wide mode
69	Set Pro Logic phantom mode
70	No function
71	Picture rotation on/off
72	Dolby register settings
74	No function
75	Reset picture colour balance
76	Reset picture geometry
77	Reset sound settings
78	Reset error codes in the NVM
79-99	No function