


IF ADJUSTMENT (AUTOMATIC)

1. Input a 38.9 MHz 100dB μ CW signal at the IF Out injection point.
2. Enter into service mode and press 34.
3. Connect a digital voltmeter to IC101 pin (23).
4. Check AFT 2.5V \pm 0.3V dc.
5. Press '00' on the Remote Commander.

SYSTEM L ADJUSTMENT (French Models)


1. Input a 33.9MHz 100dB μ CW signal at the IF Out injection point.
2. From the On Screen Menu set System to L band 1.
3. Connect a digital voltmeter to IC101 pin (23).
4. Adjust RV102 AFT for 2.5V \pm 0.3V dc.

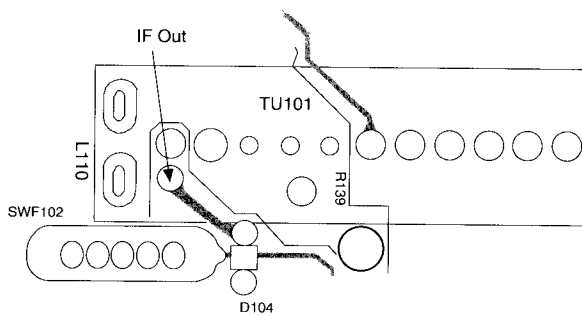

- A Board Print Side -

AGC ADJUSTMENT

1. Receive an off-air signal.
2. Enter into the Service adjust menu and select AGC.
3. Adjust the data using the Red and Yellow buttons on the Remote Commander so that there is no snow or cross - modulation visible on the screen.
4. Change the receiving off-air channel, and confirm the above status.

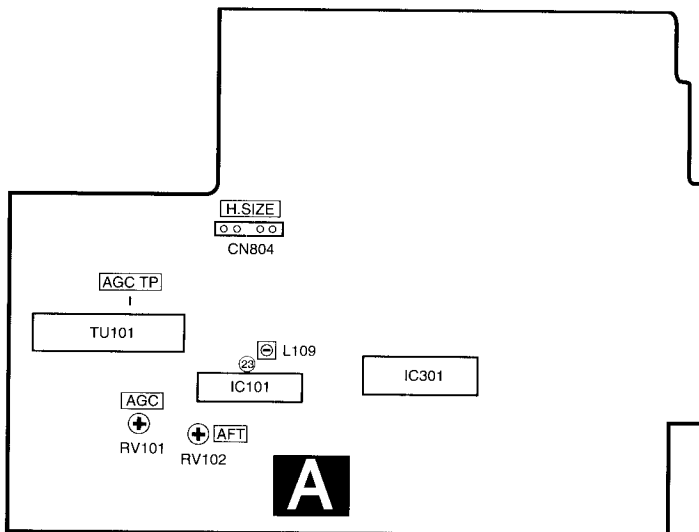

- A Board Component Side -


DEFLECTION SYSTEM ADJUSTMENT

1. Enter into the service mode.
2. Using the Blue or Green buttons select the Adjust item.
3. Press the Yellow button to enter the adjustment submenu.
4. Select and adjust each item in order to obtain the optimum image.

See Note on page 20

Adjustment	Set	Range
VERT, AMPL	Adj.	00 - 63
VER, BREATH	00	00 - 63
PAR, AMPL	00	00 - 63
PAR, TILT	32	00 - 63
V, LINEAR	Adj.	00 - 63
CORN, CORR	Adj.	00 - 63
V, CENTRE	Adj.	00 - 63
V, POSITION	42	00 - 63
H, CENTRE	Adj.	00 - 63

 
VERT, AMPL



V, LINEAR



 
V, CENTRE



H, CENTRE



H, SIZE

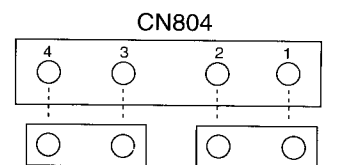

Too Small

Normal position

Fit the link as required to obtain the correct horizontal picture size. Remove the link if the H, SIZE is too large.