

4.1. ELECTRICAL CONNECTIONS

Service adjustment to this model can be performed with the supplied remote commander, RM-831.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch of the set while pressing any two buttons on the front panel.

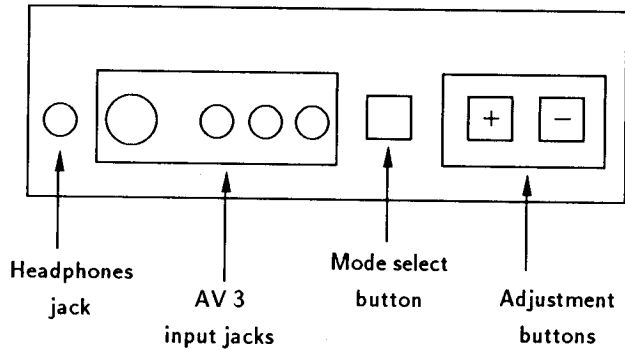


Fig.4-1

2. "TT" will appear on the upper right corner of the screen.

Command operation in service mode

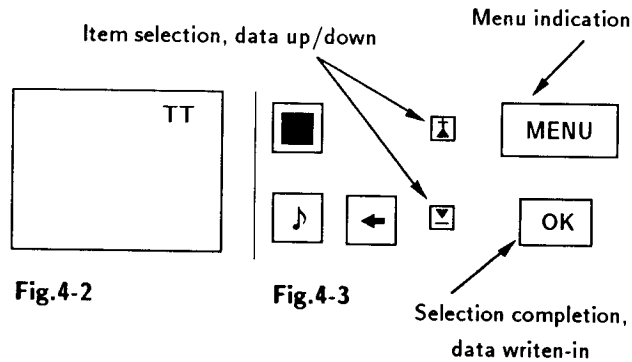


Fig.4-2

Fig.4-3

3. Press the **MENU** button of the commander to get the menu on screen.

MAIN MENU	
Programme Table	
Video Connection	
Timer	
Preset	
Picture Control	
Sound Control	
Language	
> DEMO	
Select ▲ ▼ and press OK	

4. Press the **▲** and **▼** buttons of the commander and move > to DEMO.
5. Press **OK** button to proceed to the next menu.
6. The menu of fig.4-5 will appear on screen. Select DEVICE corresponding to the adjustment item from the table on next page.

DEVICES	
Initialize	
> CXA1587S	
CXD 2018	
TDA 9145	
CXA 1526	
TDA 6612	
CX 7948 A	
P/P SERVICE	
Select ▲ ▼ and press OK	

Fig.4-5

7. If adjustment item is CXA1587S, press the **▼** button and move > to CXA1587S.

CXA1587S

Item No.	Adjustment item	Data Amount
01	PICTURE	53
02	COLOR	31
03	BRIGHT	31
04	HUE	31
05	SHARPNESS	7
06	RGB PICTURE	13
07	SUB CONTRAST	ADJ.
08	SUB COLOR	ADJ.
09	SUB BRIGHT	ADJ.
10	SUB HUE	7
11	VM LEVEL	2
12	NR LEVEL	0
13	ABL MODE	0
14	G-DRIVE	ADJ.
15	B-DRIVE	ADJ.

8. Press **OK** button to get the next selection menu.
9. Press **▼** button and move > to the adjustment item and press **OK** button.
10. Press the **▲** and **▼** buttons to change the data in order to comply each standard.
11. Press **OK** button to write data.
12. Turn off the power to quit service mode when completing the adjustment.