

CXA1587S

Item No.	Adjustment item	Data Amount
01	PICTURE	53
02	COLOR	31
03	BRIGHT	31
04	HUE	31
05	SHARPNESS	7
06	RGB PICTURE	13
07	SUB CONTRAST	ADJ.
08	SUB COLOR	ADJ.
09	SUB BRIGHT	ADJ.
10	SUB HUE	7
11	VM LEVEL	2
12	NR LEVEL	0
13	ABL MODE	0
14	G-DRIVE	ADJ.
15	B-DRIVE	ADJ.
16	G-AUTO CUT OFF	ADJ.
17	B-AUTO CUT OFF	ADJ.
18	R-MANUAL CUT OFF	ADJ.
19	G-MANUAL CUT OFF	ADJ.
20	B-MANUAL CUT OFF	ADJ.
21	GAMMA LEVEL	0
22	DC TRANSFER RATIO	3
23	DINAMIC PICTURE	0
24	Y FILTER ADJ	ADJ.
25	Y DELAY TIME	15
26	Y DELAY SWITCH 1	0
27	Y DELAY SWITCH 2	1
28	SHARPNESS LIMIT	ON
29	ALL BLK	OFF
30	H SHIFT	32
31	DAC TEST	ON
32	PRE/OVER SHOOT	12
33	SHARPNESS FO	2
34	SUB SHARPNESS	3
35	R MUTE	OFF
36	G MUTE	OFF
37	B MUTE	OFF

38	AGING 1	OFF
39	AGING 2	OFF
40	AKB OFF	ON
41	INHIBIT RGB	OFF
42	FORCED RGB	OFF
43	V/2 V	OFF
44	AXIS	PAL
45	HUE SW	OFF
46	V EXTENTION	OFF
47	AFC 1	1
48	AFC 2	0
49	AFC OFF	ON
50	REF.POSITION	0

CXD 2018

Item No.	Adjustment item	Data Amount
01	V SIZE	ADJ.
02	V SHIFT	ADJ.
03	S CORRECTION	ADJ.
04	V LINEARITY	ADJ.
05	H SIZE	ADJ.
06	PIN AMP	ADJ.
07	TILT	ADJ.
08	UPPER CORNER	ADJ.
09	LOWER CORNER	ADJ.
10	V BOW	ADJ.
11	ANGLE	ADJ.
12	HV COMP.V	13
13	HV COMP.H	8
14	FRAME SHIFT	OFF
15	FREE RUN 60 Hz	OFF
16	SYSTEM 60 Hz	OFF
17	ASPECT WIDE	OFF
18	DOUBLE SCAN	OFF
19	INTERLACE	ON
20	H SHIFT	32
21	N/S CORRECTION	ADJ.

Typical Value (OSD based)when receiving PAL Philips pattern.

CXA 1526

Item No.	Adjustment item	Data Amount
01	DC SHIFT	32
02	UPPER Y BOW	4
03	LOWER Y BOW	5
04	H.AMP	48
05	H TILT	29
06	UPPER COR BOW	32
07	UPPER TILT	32
08	LOWER COR BOW	32
09	LOWER TILT	32

TDA 6612

Adjustment item	Data Amount
Stereo-Separation	30

Should be adjusted twice 4 : 3 and 16 : 9 mode.