

TO A/C HEAD
P1501

P1501-3	A. HEAD (W)	1
P1501-4	A. HEAD (R)	2
P1501-5	GND	3
P1501-6	A. ERASE	4

TO PS4001
(Page: 4-29/G-1)

PP4001	POWER OFF (L)	1	(A1)
	P.B SIGNAL	2	(A1)
	P.B LEVEL	3	(A2)
	LP (H)	4	(A3)
	A. HEAD (R)	5	(A3)
	A. HEAD (W)	6	(A3)
	GND (NOR)	7	
	S-VHS CAS (L)	8	(A4)
	EE (H) / INSERT (H)	9	(A5)
	NOR REC (L)	10	
	R CH (L)	11	(A6)
	L CH (L)	12	(A7)
	MODE SEL	13	(A8)
	MIX (H)	14	(A9)
	AUDIO OUT (R)	15	(A10)
	GND	16	
	AUDIO OUT (L)	17	(A11)
	TUNER AUDIO (N)	18	(A12)

TO PS4002
(Page: 4-29/E-1)

PP4002		1	
		2	
		3	
		4	
		5	
	NON SW 12V	6	(B1)
	AUDIO RFC OUT	7	(B1)
	UNREG -8V	8	(B1)
	TUNER AUDIO (R)	9	(B2)
	FM MUTE (H)	10	(B2)
	TUNER AUDIO (L)	11	(B3)
	A. INPUT SEL A	12	(B4)
	LINE IN 2 (R)	13	(B5)
	A. INPUT SEL B	14	(B5)
	LINE IN 2 (L)	15	(B5)
	GND	16	
	MIC IN (L)	17	
	MIC IN (R)	18	(B6)

TO PS4003
(Page: 4-29/B-1)

PP4003	REC VR (R)	1	(B7)
	REC VR (C)	2	(B8)
	REC VR (L)	3	(B9)
	LINE IN 1 (R)	4	(B10)
	MIC (H)	5	(B11)
	LINE IN 1 (L)	6	(B12)
		7	(B12)
	RF OUT	8	(B13)
	A.DUB P (L)	9	(B14)
	AUDIO +5V	10	
	GND	11	
	AUDIO -5V	12	
	A.H.SW	13	(B15)
	GND	14	
	REC IN	15	(B16)
	PAL (L) / NTSC (H)	16	(B17)
	(ENVE OUT)	17	
	GND	18	

HI-FI AUDIO PACK C.B.A.
(VEP04361E)

TP4501 PLAY
0.12Vp-p (V-RATE)

