
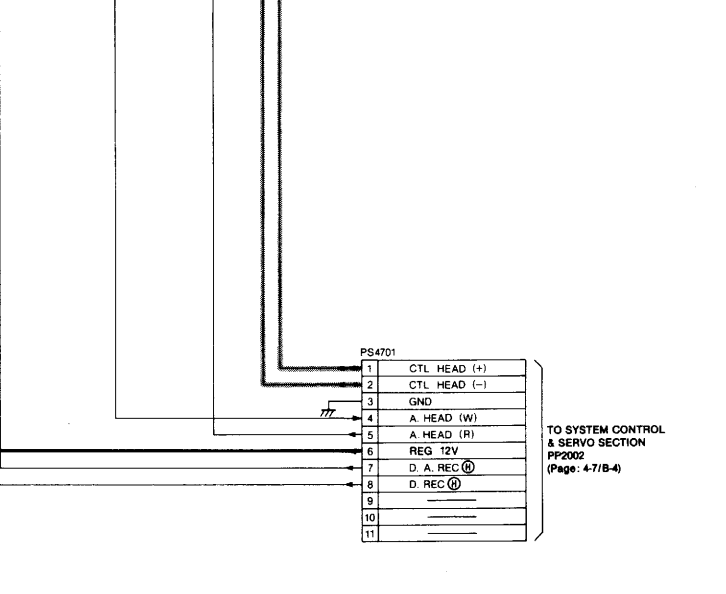
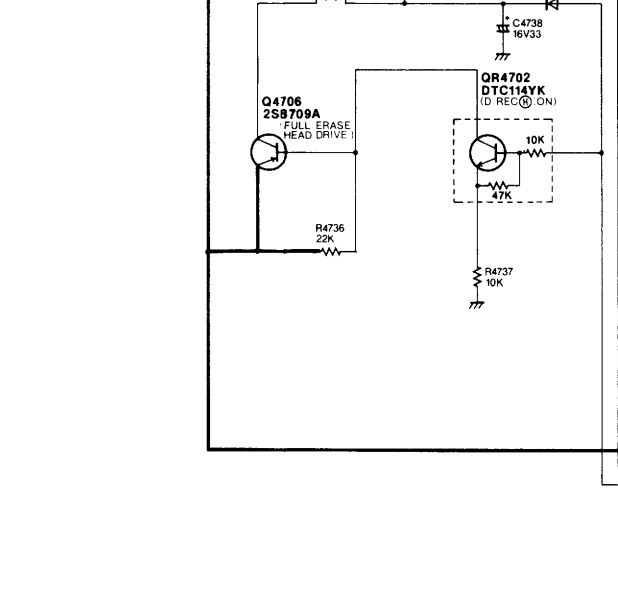
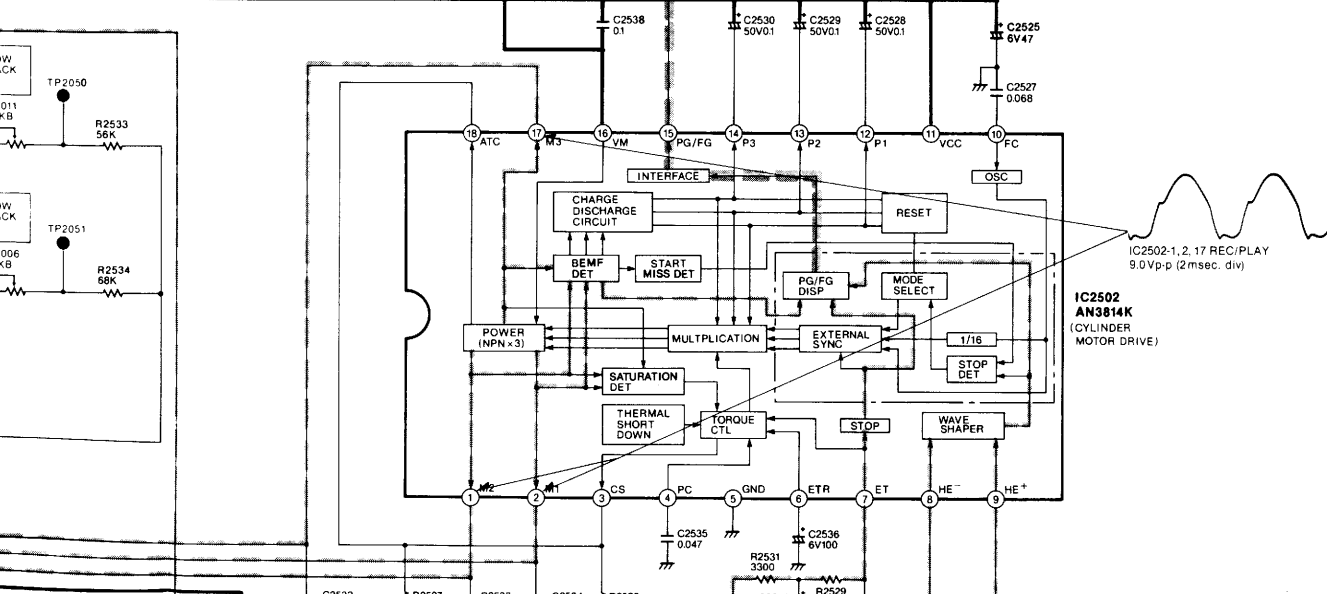
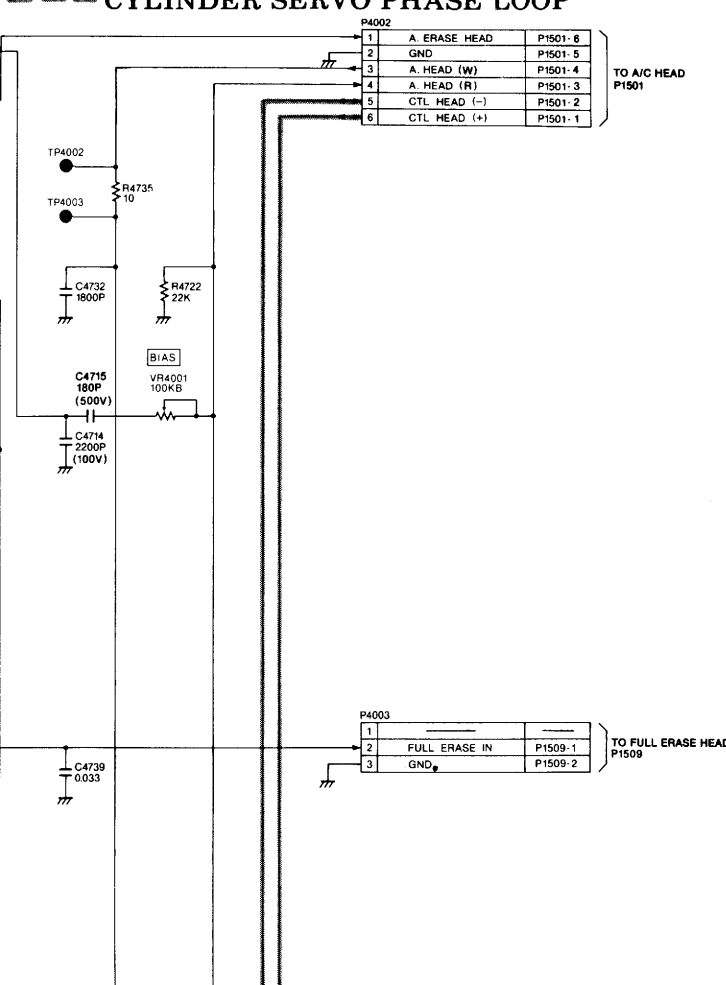
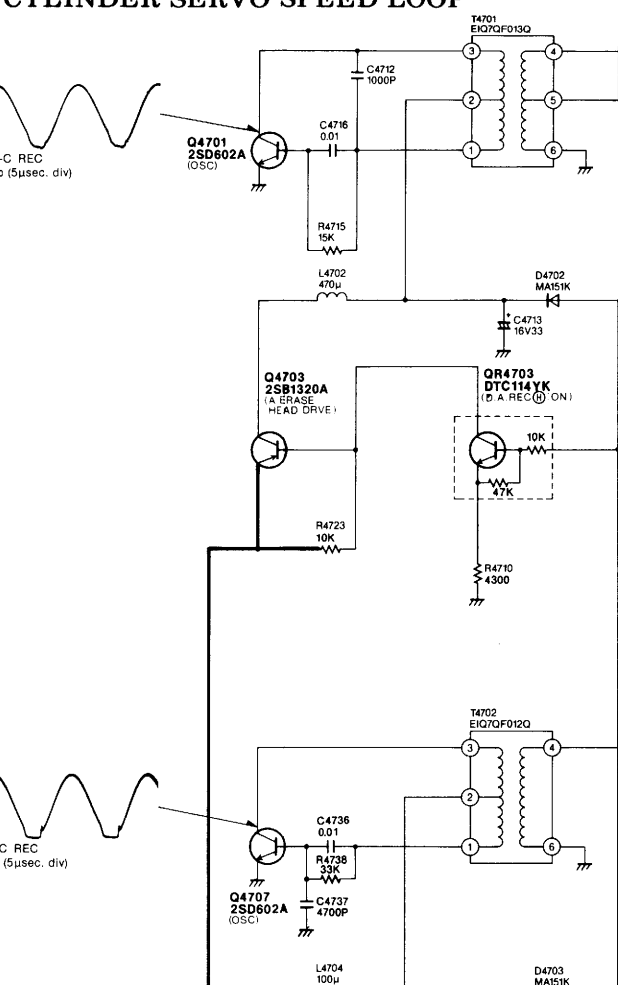


CAPSTAN SERVO SPEED LOOP

CYLINDER SERVO PHASE LOOP

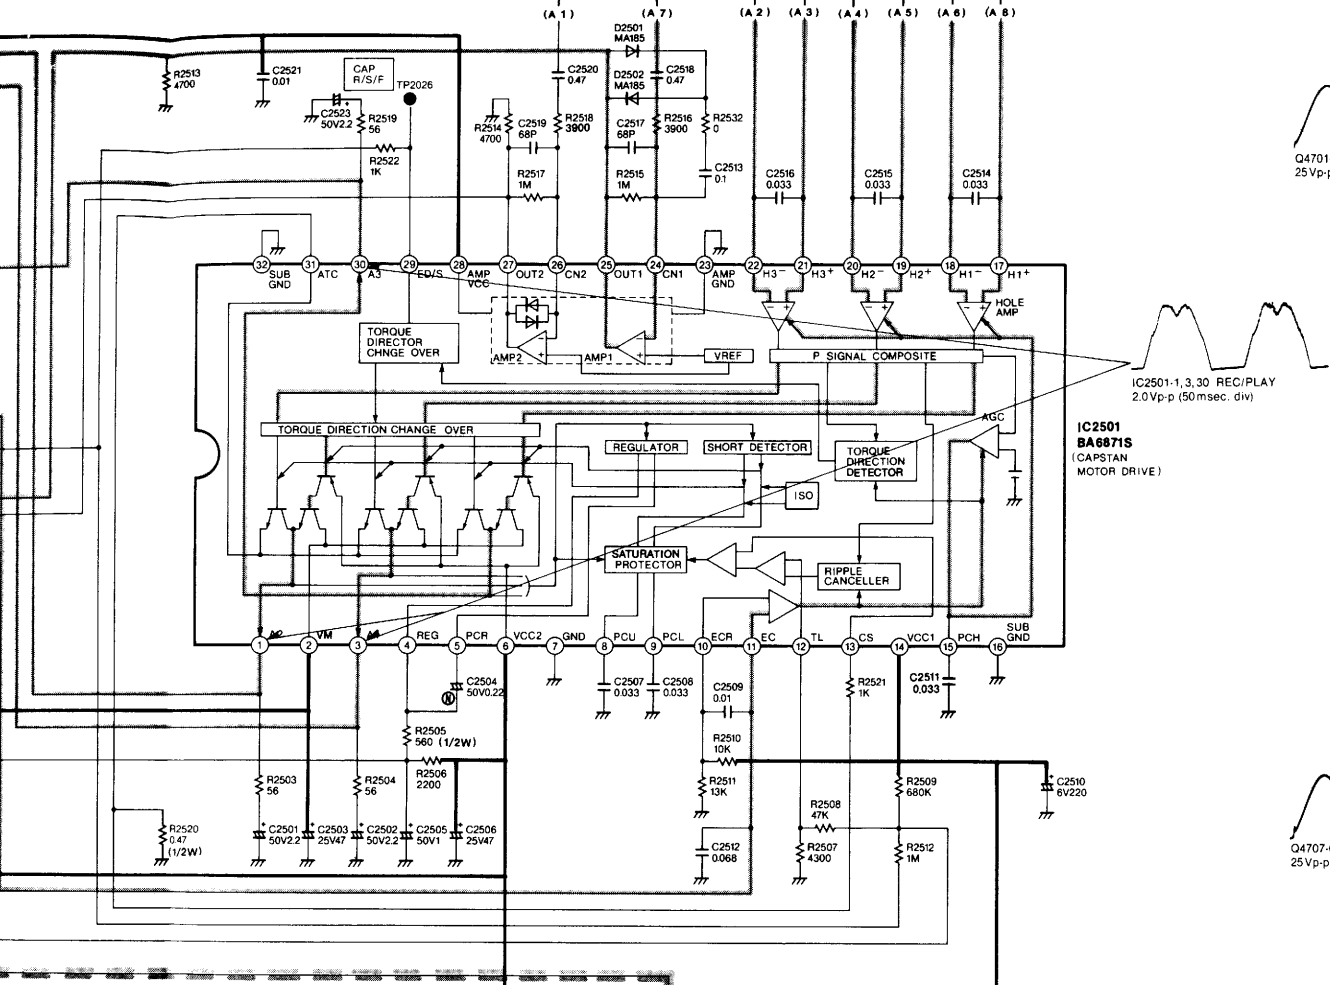

TO A/C HEAD P1501

1	A. ERASE HEAD	P1501-6
2	GND	P1501-5
3	A. HEAD (W)	P1501-4
4	A. HEAD (R)	P1501-3
5	CTL HEAD (-)	P1501-2
6	CTL HEAD (+)	P1501-1

TO FULL ERASE HEAD P1509

1	FULL ERASE IN	P1509-1
3	GND	P1509-2

TO SYSTEM CONTROL & SERVO SECTION PF2002 (Page: 4-7/B-4)

1	CTL HEAD (+)
2	CTL HEAD (-)
3	GND
4	A. HEAD (W)
5	A. HEAD (R)
6	REG 12V
7	D. A. REC (D)
8	D. REC (D)
9	
10	
11	