

SAMSUNG

VIDEO CASSETTE PLAYER

SV-A10G/SP-A10G

SV-A11G/SP-A11G

SVR-17A/SPR-17A


SVR-17B/SPR-17B

VHS
PAL


***SERVICE** Manual*

For mechanical disassembly and adjustment, refer to the "Mechanical Manual" (DX7-R/DX7-RC/DX8-R/DX8-RC) → AC68-20316A).

VIDEO CASSETTE PLAYER

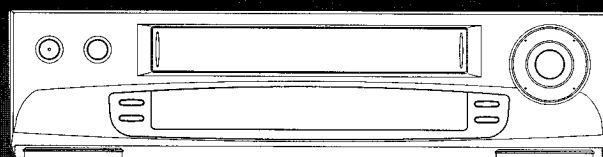

SV-A10G/SP-A10G
SVR-17A/SPR-17A

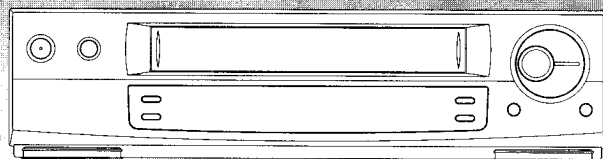

SV-A11G/SP-A11G
SVR-17B/SPR-17B

CONTENTS

1. Precautions
2. Reference Information
3. Product Specifications
4. Disassembly and Reassembly
5. Alignment and Adjustment
6. Exploded View and Parts List
7. Electrical Parts List
8. Block Diagrams
9. PCB Diagrams
10. Wiring Diagram
11. Schematic Diagrams