 


# CIRCUIT ADJUSTMENTS

Service adjustment to this model can be performed with the supplied Remote Control Commander RM-C810, RM-C811, RM-C812 and RM-C813.


## 5-1. HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power of the set and enter into stand-by mode.
2. Press the following sequence of buttons on the Remote Control Commander.




"Service mode" will appear in the top right corner of the screen. Other status information will also be displayed.

3. Press the "1" or "4" buttons to select the adjustment item from the table.
4. Press the "3" or "6" buttons to change the data as required.
5. Turn off the power to quit the service mode when adjustments are completed.

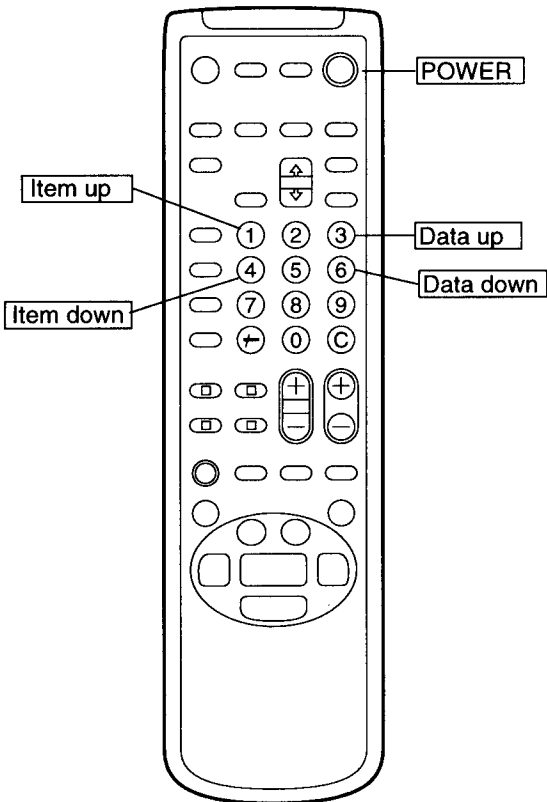

RM-C810

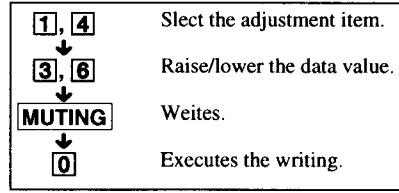

- 7, 0 All service data becomes the values in memory.
- 8, 0 All used control goes to the standard state.
- 5, 0 Service data initialization (Be sure not to use usually.)
- 2, 0 Write 50Hz adjustment data to 60Hz, or vice versa.

