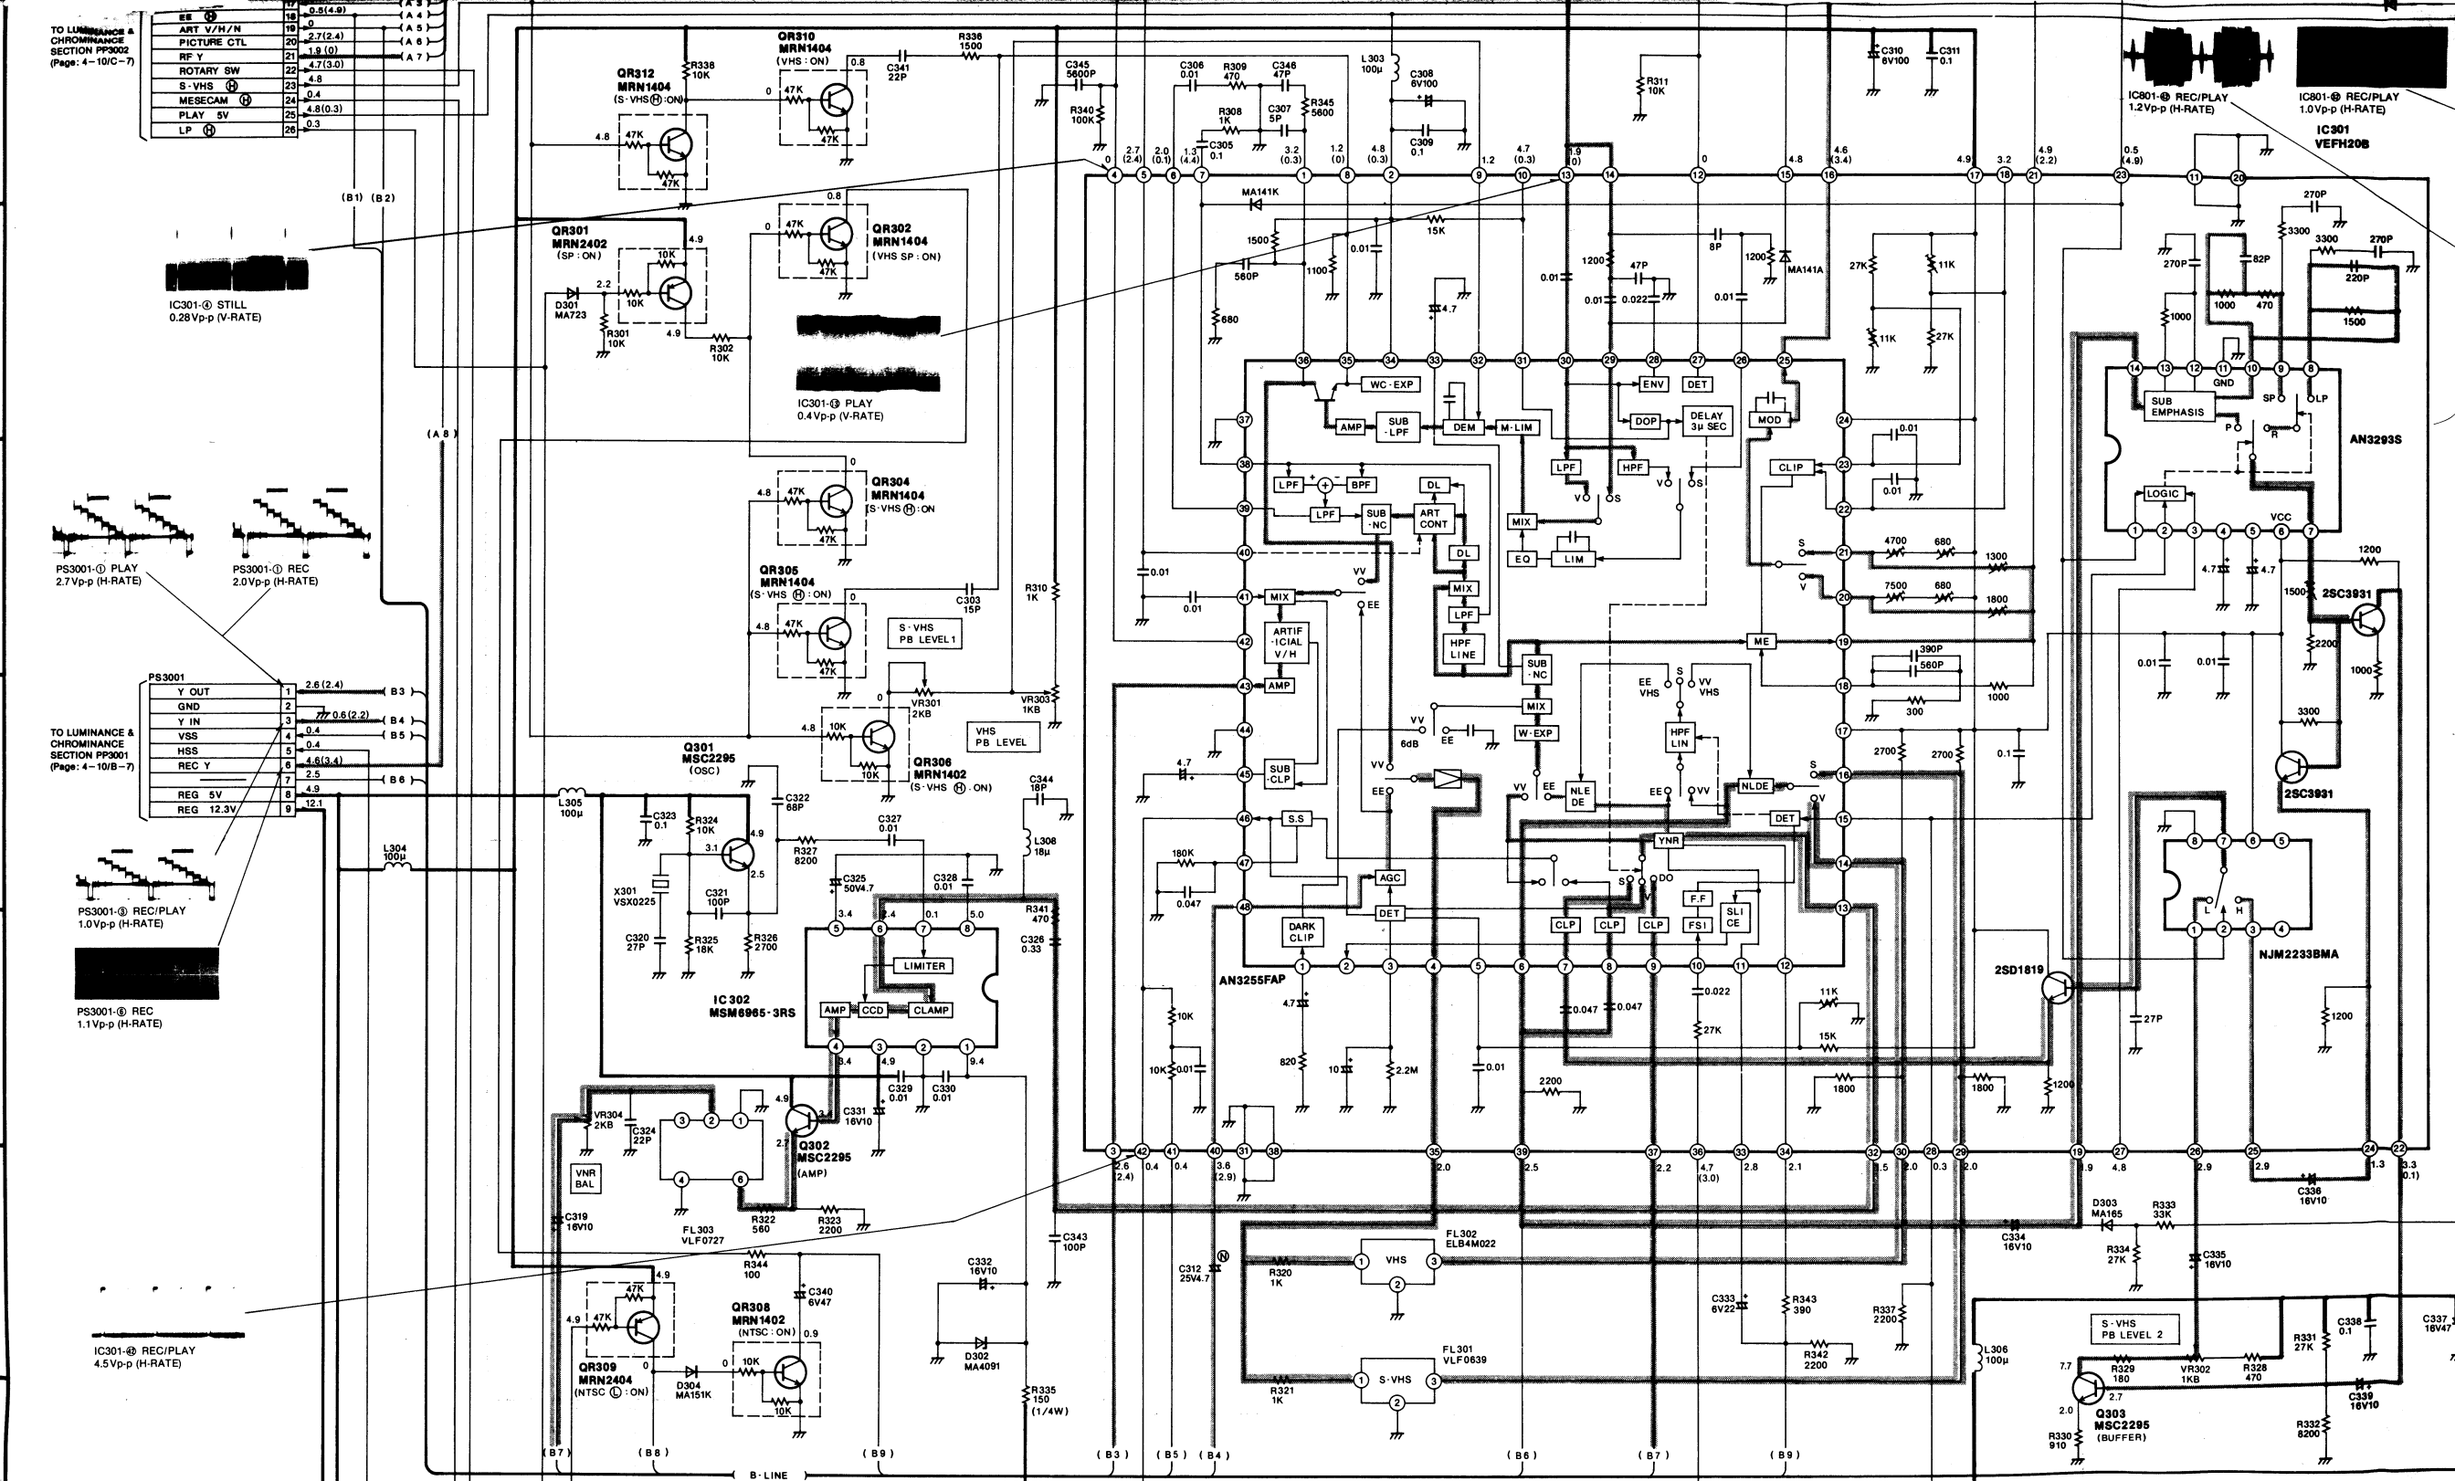
TO LUMINANCE & CHROMINANCE SECTION PP3002 (Page: 4-10/C-7)
EE
ART V/H/N
PICTURE CTL
RF Y
ROTARY SW
S-VHS
MESECAM
PLAY 5V
LP
IC301-④ STILL 0.28Vp-p (V-RATE)
IC301-⑬ PLAY 0.4Vp-p (V-RATE)
IC801-⑧ REC/PLAY 1.2Vp-p (H-RATE)
IC801-⑨ REC/PLAY 1.0Vp-p (H-RATE)
IC301 VEFH208
PS3001-① PLAY 2.7Vp-p (H-RATE)
PS3001-① REC 2.0Vp-p (H-RATE)
PS3001
Y OUT
GND
Y IN
VSS
HSS
REC Y
REG 5V
REG 12.3V
TO LUMINANCE & CHROMINANCE SECTION PP3001 (Page: 4-10/B-7)
PS3001-③ REC/PLAY 1.0Vp-p (H-RATE)
PS3001-⑥ REC 1.1Vp-p (H-RATE)
IC301-⑭ REC/PLAY 4.5Vp-p (H-RATE)
QR301 MRN2402 (SP : ON)
QR302 MRN1404 (VHS SP : ON)
QR304 MRN1404 (S-VHS Ⓗ : ON)
QR305 MRN1404 (S-VHS Ⓗ : ON)
QR306 MRN1402 (S-VHS Ⓗ · ON)
QR308 MRN1402 (NTSC : ON)
QR309 MRN2404 (NTSC Ⓛ : ON)
QR310 MRN1404 (VHS : ON)
QR312 MRN1404 (S-VHS Ⓗ : ON)
D301 MA723
D304 MA151K
D302 MA4091
D303 MA165
MA141K
MA141A
Q301 MSC2295 (OSC)
Q302 MSC2295 (AMP)
Q303 MSC2295 (BUFFER)
IC 302 MSM6985-3RS
AN3255FAP
AN3293S
2SC3931
2SD1819
NJM2233BMA
FL303 VLF0727
FL302 ELB4M022
FL301 VLF0639
X301 VSX0225
VR301 2KB
VR302 1KB
VR303 1KB
VR304 2KB
VNR BAL
S-VHS PB LEVEL
S-VHS PB LEVEL 2
VHS PB LEVEL
B-LINE