


4-2. ADJUSTMENT METHOD

Item Number 08


This explanation uses V-SHIFT as an example.

1. Select 08 V-SHIFT with the "1" and "4" buttons.
2. Raise/lower the data with the "3" and "6" buttons.
3. Select the optimum state. (The standard is for 0F PAL reception.)
4. Write with the MUTE button.
5. Execute the writing with the "0" button. (The WRITE display.)


Use the same method for Items Number 00-40. Use "1" and "4" to select the adjustment item, use "3" and "6" to adjust, write with "MUTE", then execute the write with "0".

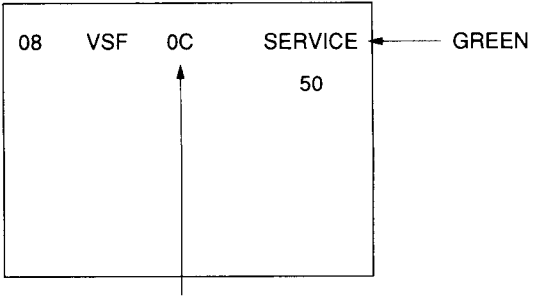

Adjusted with "3" and "6" buttons

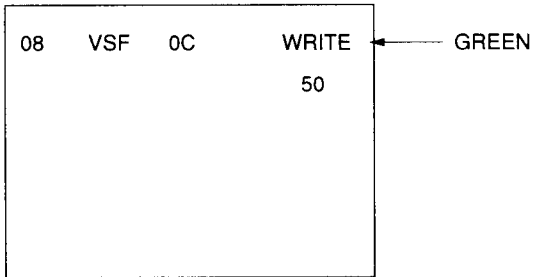

Written with "MUTE"

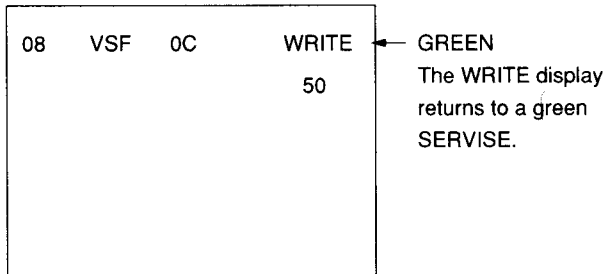

Write executed with "0"