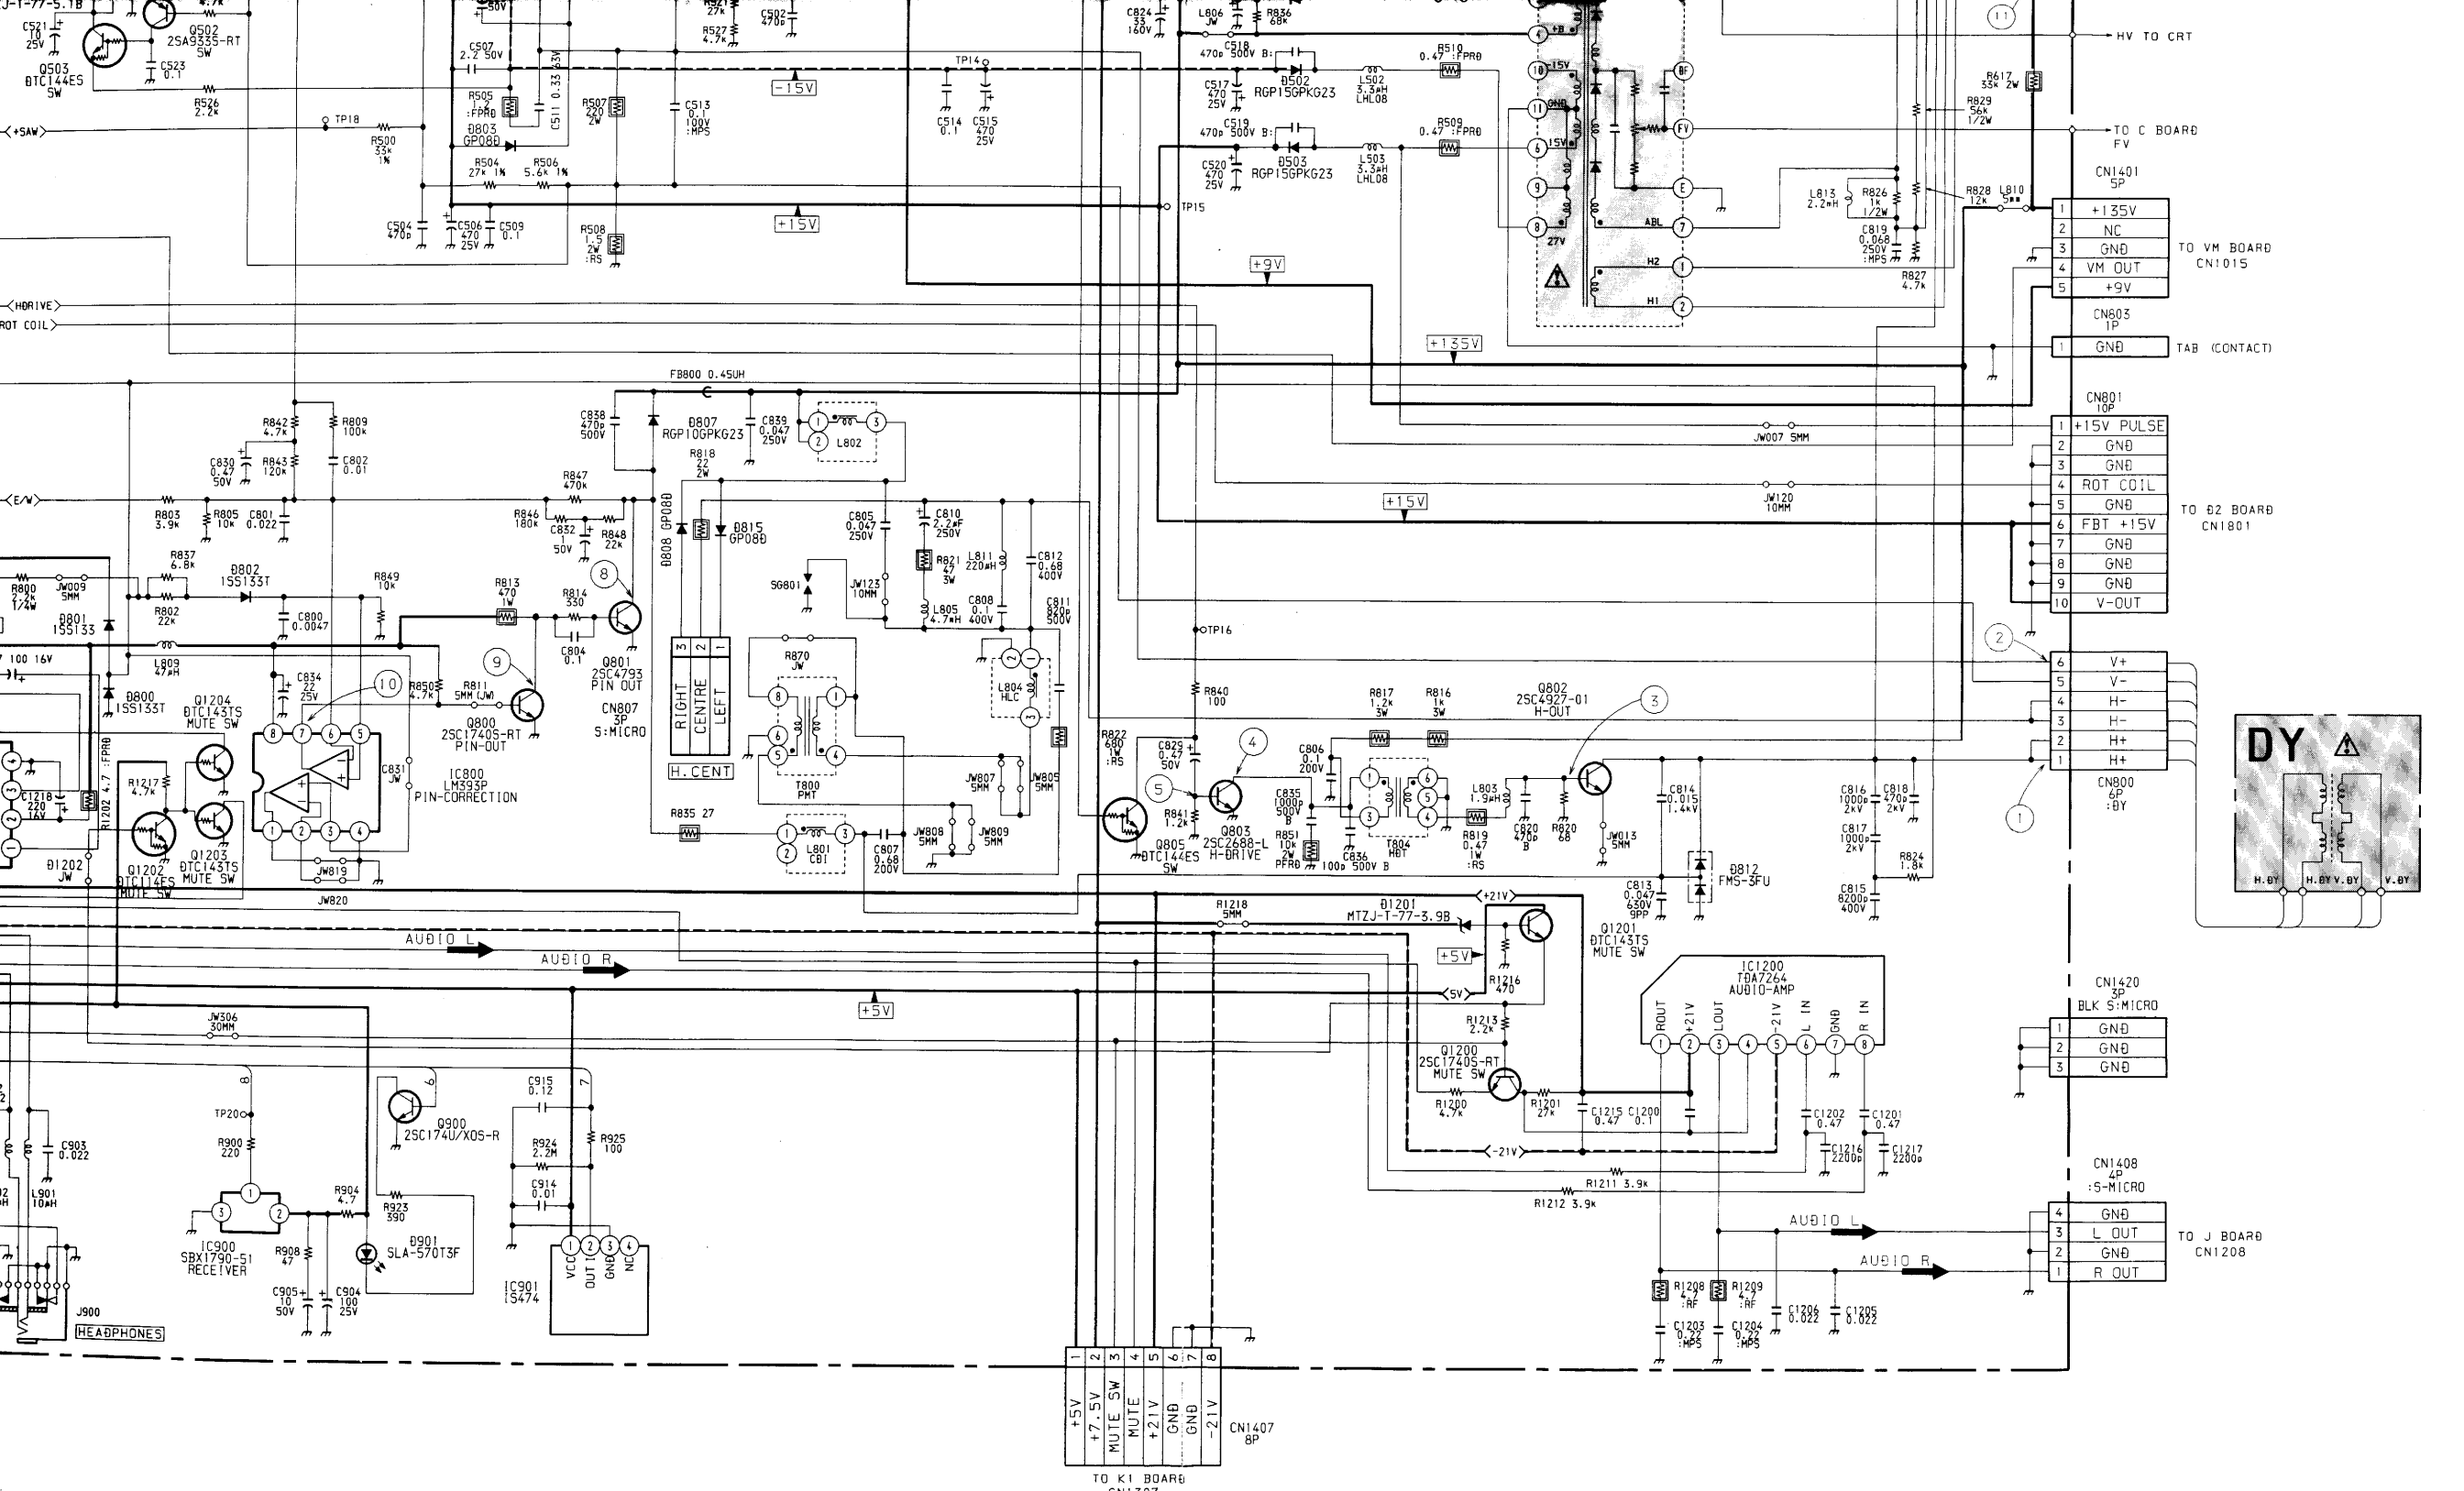
TO VM BOARD CN1015
TO D2 BOARD CN1801
TO C BOARD FV
HV TO CRT
TO J BOARD CN1208
TO K1 BOARD
CN1407 8P
CN1401 5P
CN803 1P
CN801 10P
CN800 6P :BY
CN1420 3P BLK S:MICRO
CN1408 4P :S-MICRO
CN807 3P S:MICRO
+135V
NC
GND
VM OUT
+9V
TAB (CONTACT)
+15V PULSE
ROT COIL
FBT +15V
V-OUT
V+
V-
H-
H-
H+
H+
DY
H.BY
H.BY V.BY
V.BY
AUDIO L
AUDIO R
+5V
+7.5V
MUTE SW
MUTE
+21V
GND
-21V
L OUT
R OUT
RIGHT
CENTRE
LEFT
H.CENT
HEADPHONES
IC1200 TDA7264 AUDIO-AMP
ROUT
LOUT
L IN
R IN
IC900 SBX1790-51 RECEIVER
IC901 IS474
VCC
OUT
GND
NC
Q800 2SC1740S-RT PIN-OUT
Q801 2SC4793 PIN OUT
Q802 2SC4927-01 H-OUT
Q803 2SCZ688-L H-DRIVE
Q805 DTC144ES
Q900 2SC174U/XOS-R
Q1200 2SC1740S-RT MUTE SW
Q1201 DTC143TS MUTE SW
Q1202 DTC114ES MUTE SW
Q1203 DTC143TS MUTE SW
Q1204 DTC143TS MUTE SW
Q502 2SA933S-RT
Q503 DTC144ES
IC800 LM393P PIN-CORRECTION
D900 SLA-570T3F
D812 FMS-3FU
FB800 0.45UH
-15V
+9V
+21V
-21V
HDRIVE
E/W
ROT COIL